

Coinco BA30 Flash Codes

Flash codes 1-6 may appear during normal servicing of the BA30. To access flash codes 7-18, open bill box lid and remove power from the BA30 for 10 seconds. Reapply power to BA30 with bill box lid open. Flash codes 7-18 will now appear for respective error or condition detected in the BA30. If more than one error or condition is exists, the lower number flash code will appear until its respective error or condition is corrected. The left and right sensors referenced below are given viewing the BA30 from the front.

# of Flashes	Description of Flash Codes
1	Bill box full
2	Bill box lid is open or bill box is off
3	Check bill path
4	All bill accept switches are off
5	Bill jam or sensor error
6	Stacker motor/home sensor
7	Transport motor/encoder sensor
8	Reserved for future use
9	EEPROM checksum error
10	RAM or ROM checksum error
11	Center optic sensor
12	Right optic sensor
13	Left optic sensor
14	Bill position sensor error
15	Right skew sensor
16	Left skew sensor
17	Lower board anti-pullback lever sensor
18	Upper board anti-pullback lever sensor